

User manual VMS Actuated lift







Refer to touch screen controller shown on the left:

- Status 1 showing the states of the actuated lift and VMS position. Below is the different states
 - ♦ Raised—the VMS up
 - Lowered—the VMS down
 - ♦ Rising—the VMS is moving up
 - Lowering—the VMS is moving down
 - ◆ Sense Err—the sensor are failing to detect the position of the VMS after driving for 30 seconds.
- Button 2 is the Raise button, when its color is green
 -the VMS is moving up. Press again to pause the
 movement. Once the sensor has detected the VMS
 is fully up, the movement will stop.
- 3. Button 3 is the Lower button, when its color is green-the VMS is moving down. Press again to pause the movement. Once the sensor has detected the VMS is fully down, the movement will stop.