




User manual

Arrow Board—Double Sided

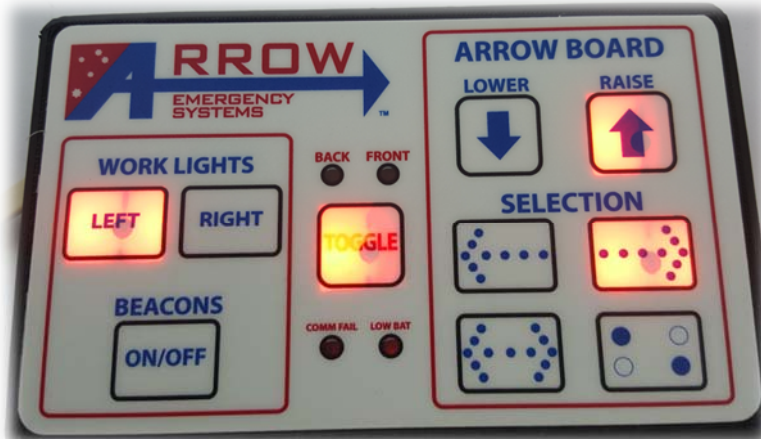

Raising the Arrow Board

- With the back controller selected via the [Toggle Button](#), Press the RAISE-[Up Arrow Button](#) to raise the arrow board. Upon pressing this button, the arrow board is then immediately activated allowing selection. The [Up Arrow Button](#) will start flashing red. Once the Arrow Board is fully up the [Up Arrow Button](#) will light up with a solid red indicating the Arrow Board is up.

Lowering the Arrow Board

- With the back controller selected via the [Toggle Button](#), Press the Lower-[Down Arrow Button](#) to Lower the arrow board and turn the Arrow Board Off. The [Lower Arrow Button](#) will start flashing red. Once the Arrow Board is fully down the [Up Arrow Button](#) light goes off indicating the Arrow Board is down.

Selecting Arrow Board Messages

- Press the [Up Arrow Button](#) to power on the Arrow Board which allows the [Selection Buttons](#) to work. The [Toggle Button](#) selects between the front and back Arrow Board controller. The remote will indicate the selection made by illuminating a led to below the respective front/back label.
- With the Arrow Board Controller selected, an Arrow Board message is selected by pressing the any of the 4 [Selection Buttons](#). Upon a [Selection Button](#) being pressed , the button is lit up indicating the selection is active and shown on the Arrow Board. Toggling between the front/back controller will show the illuminated selection button in respect to the active Arrow Board controller.

Work Lights and Beacons

- With the back controller selected via the [Toggle Button](#), the [Work Lights](#) and [Beacons](#) can be turned On/Off and is operated independently of the Arrow Board
- To operates these features—With the back controller selected, Simply press the respected buttons to power on and press again to power off. When a feature is on, the respected button will light up in red.