


Handheld Remote Controller - HRC

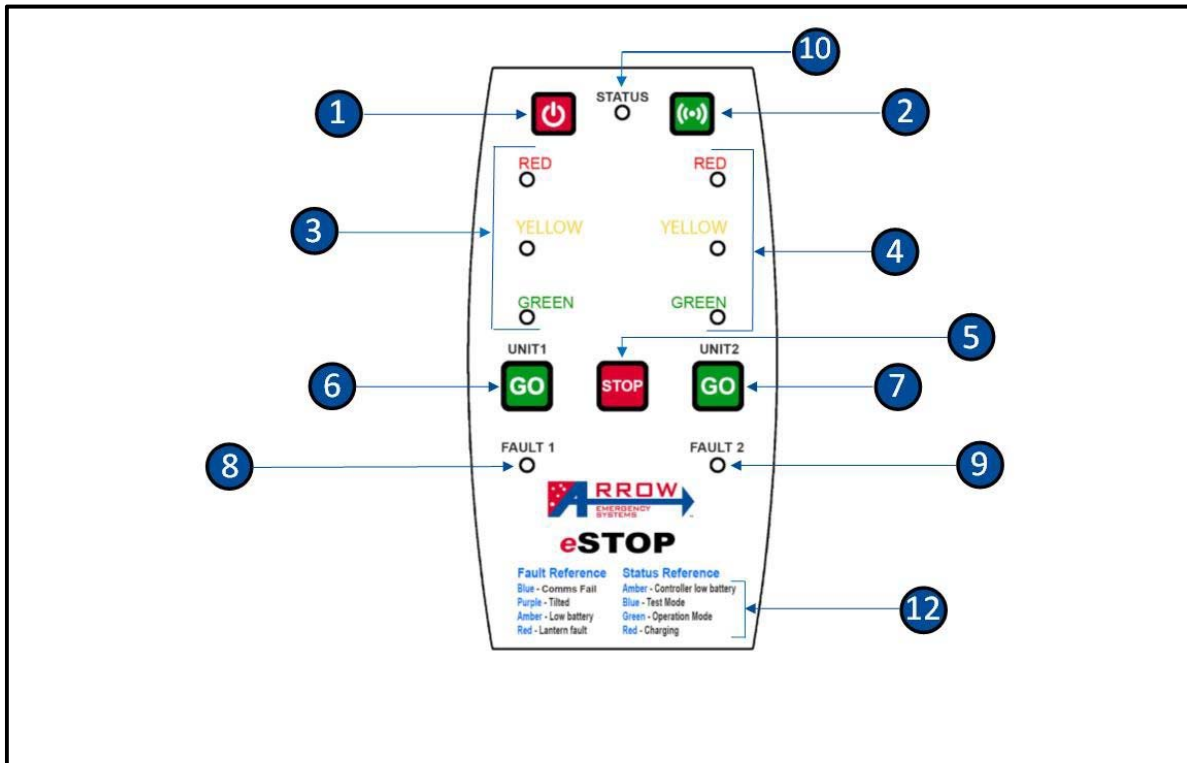

Flashing Yellow Operations

1. Power up HRC, make sure HRC is paired to eSTOP PTS (portable traffic signal). Wait for Fault lights to turn Green.
2. Activate HRC to **Operation Mode (Status 10 Green)**
3. Activating Flashing Yellow - When Unit1 and/or Unit2 are Red (**LED Indicator 3 4 Red**) 5 second long press Go Button 6 or 7 to activate the respective unit to flashing yellow.
4. Deactivating Flashing Yellow – when Unit1 and/or Unit2 is in Flashing Yellow, quick press Stop Button 5 to deactivate Flashing Yellow, and return the units to red. Units can now be operated as usual (e.g changing to green or reactivating either units to Flashing Yellow).

Note:

- If a unit is green or has a critical fault, neither unit can be activated to flashing amber.*
- If one unit is flashing amber and one unit is red, the red unit can be activated to flashing amber.*
- If one unit is flashing amber and one unit is red, the red unit **cannot** be changed to green.*
- All flashing amber cannot be changed to green, must be changed to red before changing to green.*
- If a critical occurs during flashing yellow, the unit will automatically change to red.*