


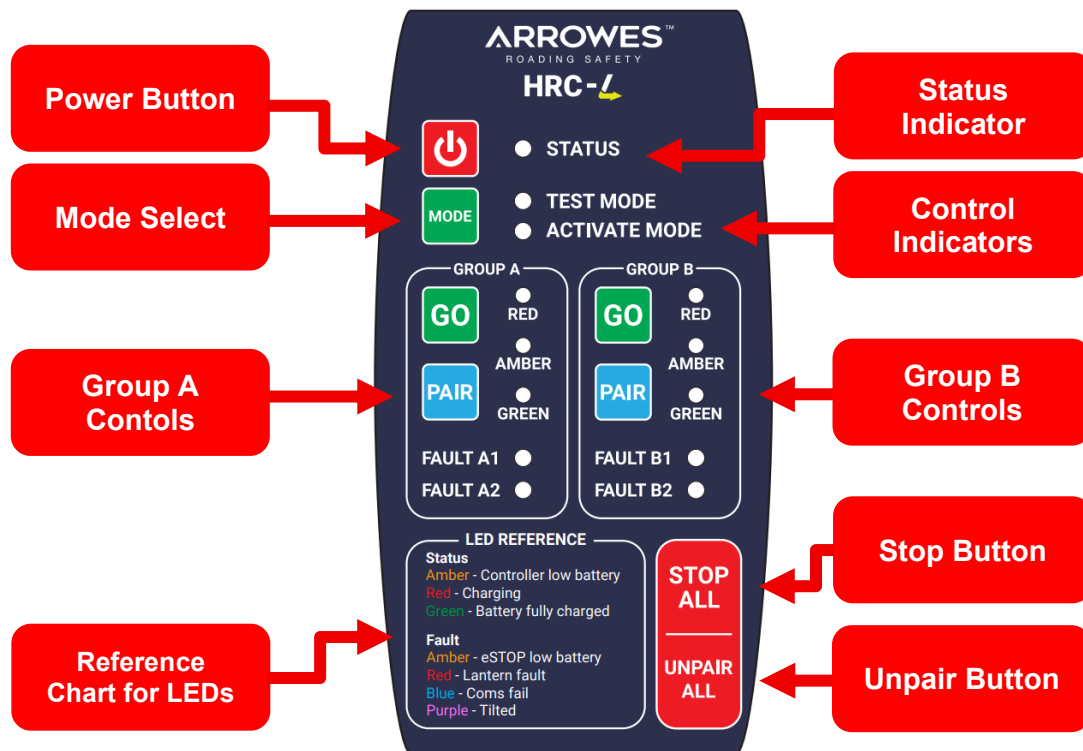

1.1 Initial Setup

Ensure the HRC-L and any batteries used to power the eSERIES product are fully charged and operational.

All eSERIES products which will be linked with the HRC-L must support LoRa communication.

1.2 Pairing to the eSERIES

1. Hold the **Power Button** for 5 seconds to power on the HRC-L.
2. Connect the battery to the eSERIES product and power on the device.
3. Complete one of the following steps:
 - a. For Wired Pairing: Connect the physical USB cable between the port on the HRC-L and the eSERIES product.
 - b. For Wireless Pairing: Press the **Pair Button** on the eSERIES product.
4. Short press the **Pair Button** in Group A or Group B Controls. Both groups can support up to 2 devices, for a total of 4 connected units.
5. Wait until the Fault Indicator in the Group Controls switches to **Green**.
6. Short press the **Go Button** in the same Group as the connected device to run a quick test. Ensure all lamps illuminate.

7. Hold the **Mode Select** until the **Control Indicators** light the Activate Mode.

1.3 Using the HRC-L

Stop Button activates all connected eSERIES devices.

eSTOP lamps to **Red**
eBOOM lowers

Go Button only activates devices in the group.

eSTOP lamps to **Green**
eBOOM raises

1.4 Unpairing the eSERIES Devices

1. Hold the **Mode Select** until the Control Indicators illuminate the Test Mode.
2. Hold the **Unpair Button** until all Fault Indicators in the Group Controls disappear.
3. Hold the **Power Button** until the HRC-L powers off.

1.5 Resetting the HRC-L

If the HRC-L becomes unresponsive or does not show any lights, the HRC-L can be reset by pressing the **Power Button** and the **Mode Select**. Devices will remain paired.



Consult the relevant eSERIES User Manual for additional information about the product.

Contact Arrowes for assistance if required.

